


- Open up any browser e.g. Internet Explorer, Mozilla Firefox or Google Chrome. In the address bar, type 192.168.20.1 then press Enter.


Username: admin

Password: admin (or your wifi password)

- Click on **Basic Setup** > choose **Ethernet WAN**

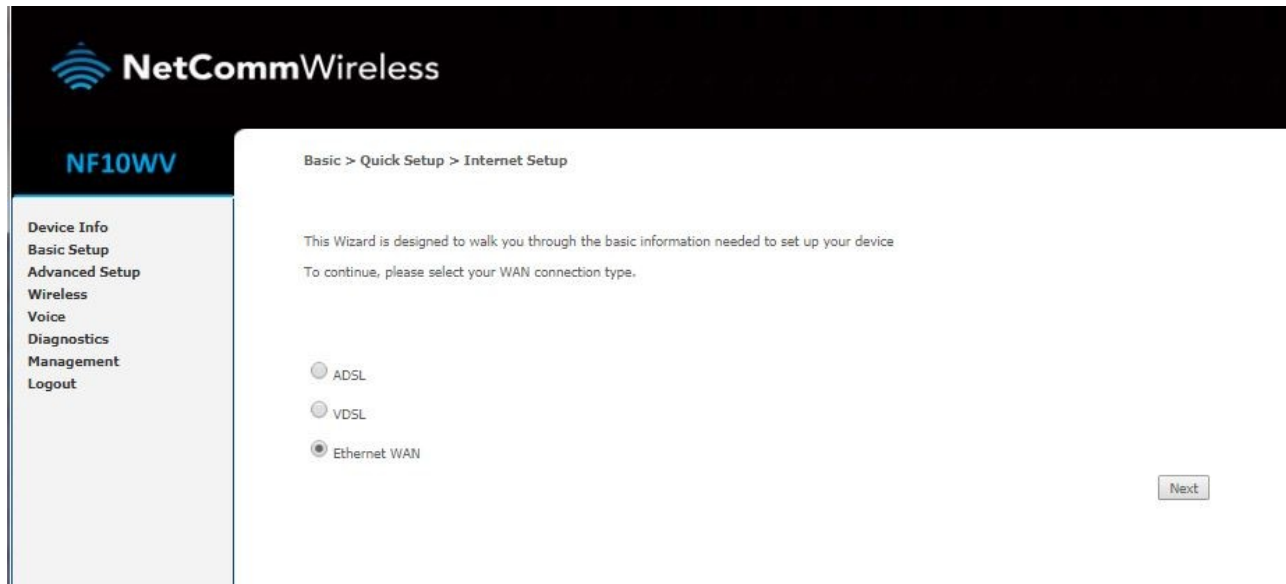

- Choose **PPP over Ethernet**

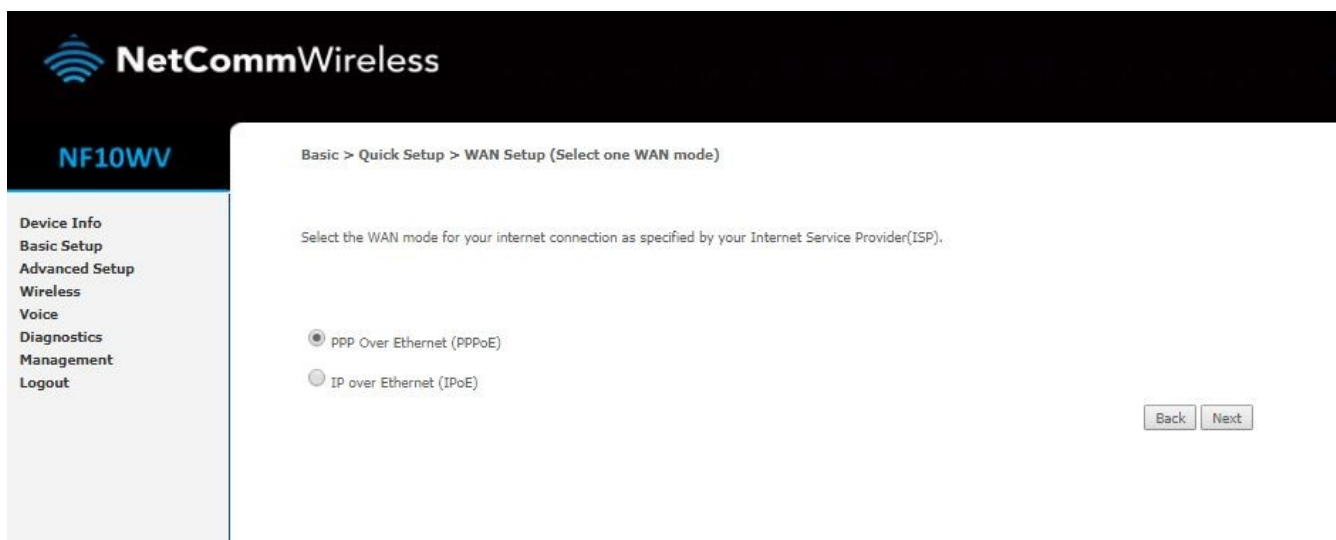

- Choose **Custom VLAN Tag** then type **100**

The screenshot shows the NetComm Wireless web interface. The breadcrumb trail is "Basic > Quick Setup > VLAN Setup". The page title is "NF10WV". The left sidebar contains a menu with "Device Info", "Basic Setup", "Advanced Setup", "Wireless", "Voice", "Diagnostics", "Management", and "Logout". The main content area has the heading "Basic > Quick Setup > VLAN Setup" and the instruction "Please select the correct VLAN option for your connection: If you are unsure, please contact your ISP". There are three radio button options: "No VLAN Tag", "VLAN Tag 10(For most New Zealand Customers)", and "Custom VLAN Tag", with the last one selected. Below the options is a text input field for "VLAN Tag" containing the value "100" and a range "(0-4094)". At the bottom right of the form are "Back" and "Next" buttons.

- Type your Clear Networks login credentials then click on Finish.

The screenshot shows the NetComm Wireless web interface. The breadcrumb trail is "Basic > Quick Setup > Ethernet WAN only > PPPoE Information". The page title is "NF10WV". The left sidebar contains a menu with "Device Info", "Basic Setup", "Advanced Setup", "Wireless", "Voice", "Diagnostics", "Management", and "Logout". The main content area has the heading "Basic > Quick Setup > Ethernet WAN only > PPPoE Information" and the instruction "Enter the User ID and Password assigned to you by your Internet Service Provider (ISP)". There are two text input fields: "User ID:" and "Password:". At the bottom right of the form are "Back" and "Finish" buttons.